

How to select options for 5 or 10 pin bowling modes Brunswick String 360 Controlled Pinsetters

Step 1

Turn off both Stop/Run switches on the 360 Controller for each lane. (Refer to Figure 1)


(Figure 1)



Step 2

Select **Options** at the lower middle part of the display screen. (Refer to Figure 2)


(Figure 2)

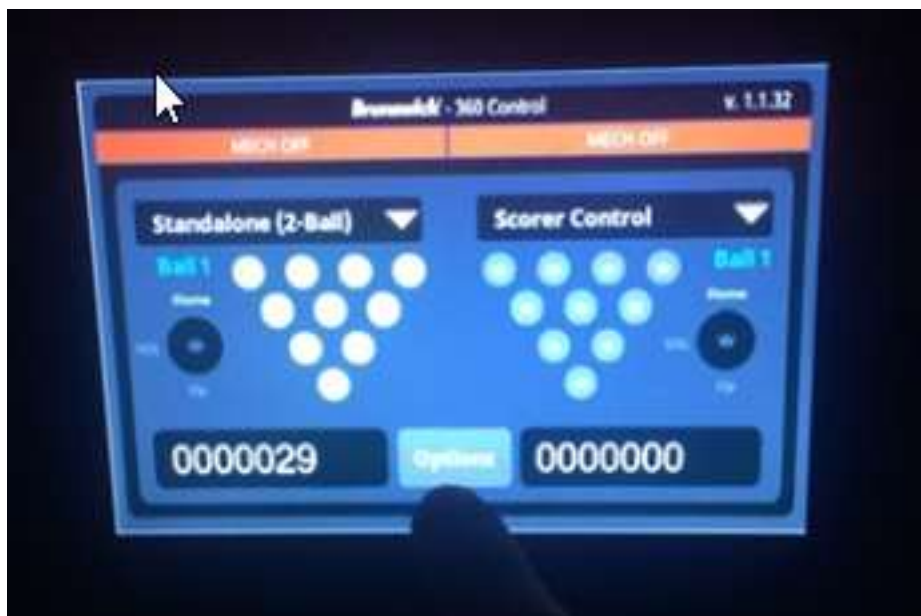

Step 3

Select the firmware version at the upper right-hand corner of the display to bring up the options to pick between 5 or 10 pin bowling modes. (Refer to Figure 3)


(Figure 3)

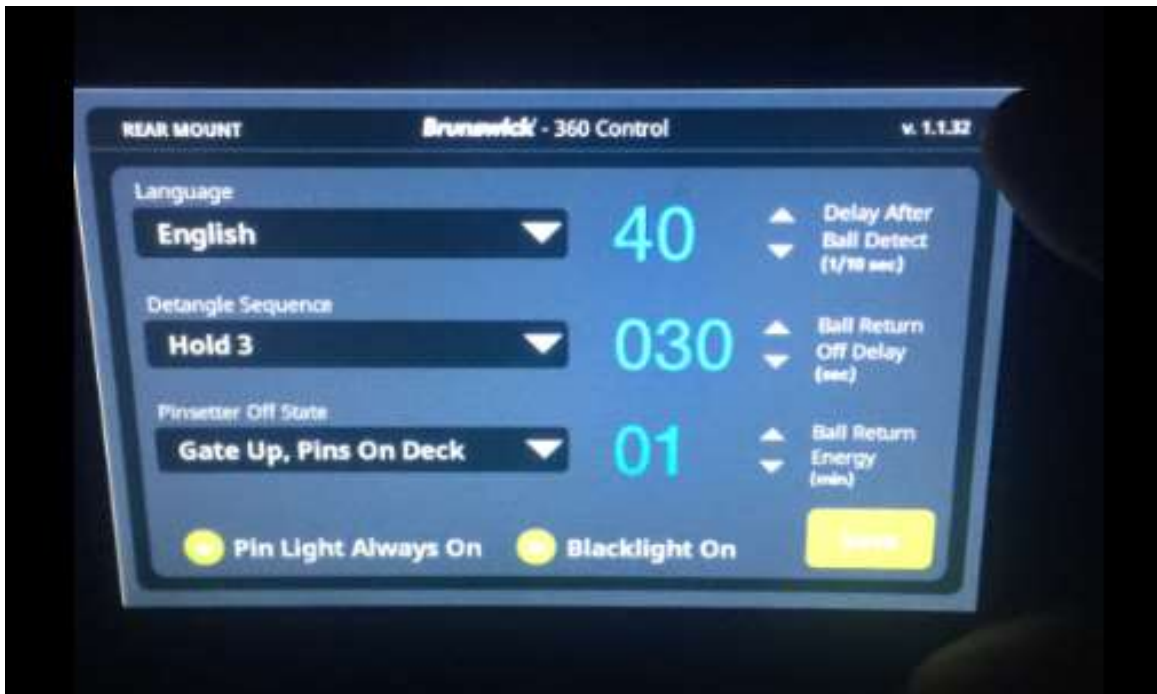

Step 4

Each time the Bowling mode is selected it will toggle back and forth between the modes to select. (Refer to Figures 4 and 5)

(Figure 4)

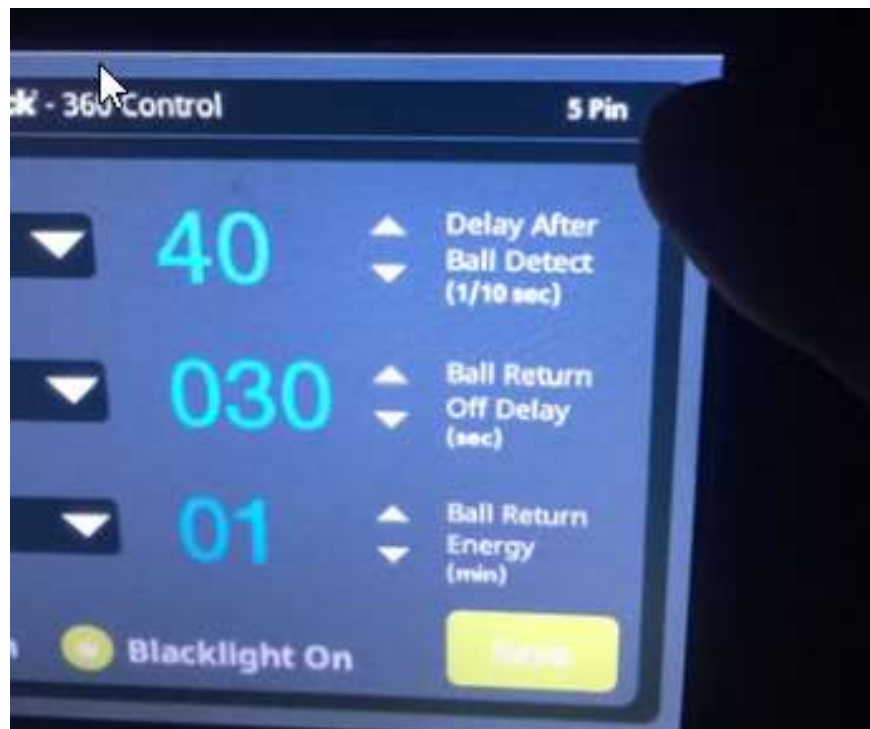

(Figure 5)



Step 5

Select **Save** at the lower right-hand corner of the display screen to save the changes. (Refer to Figure 6)

(Figure 6)

