


How to modify the 360 String pinsetters with the new style of pit curtain to allow light bowling balls to roll under the pit curtain.

Before modification:



Ensure that the bottom pit board is approximately 6 ¾ inches to the curtain and follow these instructions.

- Loosen the 2 Torx screws on the back side of the pit curtain wooden mounting bracket.
- Remove all the screws that hold the front facing and the 3 screws behind the facing; 1 in each corner and 1 in the middle.
- Remove the side screws first and then hold each end before removing the center screw. If this is not done the entire curtain will fall from the assembly.
- Remove the center screw and lift it flush with the wood frame, then re-install the middle screws first to hold in position.
- Reverse the process to complete modification.

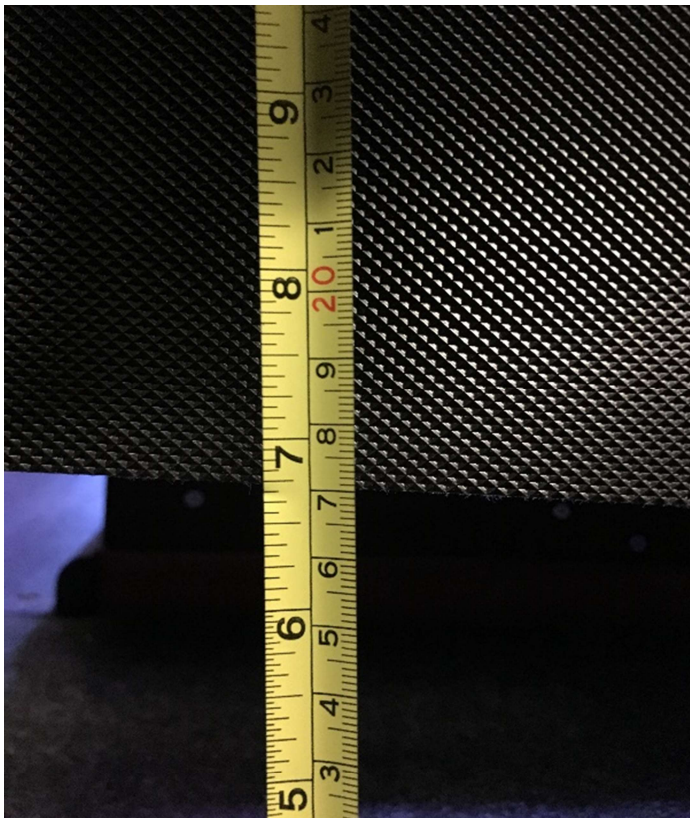

After modification:

